| ECS Configuration C | hange Request | | | <u>F</u> | Page 1 of | 6 Pa | ge(s) | |
|---|---|--------------------------------|--------------------------------------|-----------------------------|-------------------------------|----------------------------|--------------------------|-----------------------|
| 1. Originator Rajesh Dharia | 2. Log Date: 11/24/98 | 3. CCR #: 98-16 | 120 | 4. Rev: | 5. Tel: X0498 | | 6. Off : 3204E | 7. Org. DEV |
| 8. Title of Change: Install F | lexLM/6.1 in VATC on hos | st t1acg01 and | t1wkg01 | | | | | |
| 9. Originator Signature | 10. Date: | 4198 | 11. Class | 12. T | Гуре: | 13. Need | | 11/30/98 |
| 14. Office Manager Signatu | T. 01 | Date: /スシ/98 | 16. Date (Decision 11/25/98 | | 17. Cat Change Other | legory of | 18. Pr Emerg | riority: jency |
| 19. Documentation/Drawing Matches H | is Impacted: W + S/N Mo | B light | Q. Schedul | | | (s) Affected | | |
| 22. Release Affected: 4PY, 5A | (100 | 23. Date due 1 Customer: | | mpl. Date: 30/98 | | Effectivity Change: | | 26. Est. Cost None |
| 27. Source Reference: [Mary Ellen Corbett 's ccmail | | tion Item | ☐ GSFC C | CR [| Tech Ref. | ⊠Othe | er: | |
| 28. Description of Change VATC requires a three serve At present, only a single serv | er configuration for its FlexL | _M 6.1 license | manager to | | s near a DA | AC look-alik | ce as pos | ssible: |
| 29. Proposed Solution: (us FlexLM 6.1 is currently install FlexLM 6.1 on t1wkg01 and t provide feedback to MSS dev | led only on t1drg01 in VAT 1acg01 server. Use and re | C. Since, ther edline the atta | re needs to b ached install | e a three instruction | server confiç that will be | guration, we used to su | e need to pport PS | install iR. Please |
| 30. Atternate Solution: (us None | e additional sheets if ned | cessary) | | | | | | |
| 31. Consequences if Chan Will cause DDTS and FlexLN | | | al sheets if | necessar | у) | | | |
| 32. Does Change Affect Ar ☐Maintenance Training ☐Baseline (XRP) ☐Y2K | Performance Doperation | | | | e ⊠Suppo | rt ⊠Tes | t | |
| 33. Organization(s) Affe | cted: □CM □Clea □QO ☒ Rel D □Sys. Dev. □Sys. | Dev 🔲 | Contracts Procuremen Sys Verf Ac | t 🖾RT | sc 🗆 | □FOS Sci. Data E | |]M&O Security |
| 34. Site(s) Affected: ☐E | | ATC DEDC | □GSFC | ∐LaRC | □NSIDC | □SMC [| □AK [|]JPL |
| 35. Board Comments: | | | | | | 36. Work | Assign | ed To: |
| 37. Release Authorized (Fo | / , | □No | | /erified/Si | gnature and | d Date | | |
| 39. EDF/REU2 CCB Chair | Sign/pate): 40. | Disposition DisAppr Fwd/EC | oved □V | _Ap/C /ithdraw /ESDIS | 41. ES | DIS ERB C | oncurre | nce: |
| 42. PCS CCB Chair (Sign/D | | Disposition: DisApproved | App 🔲 | A/C 🗌 | 44. CC | R Closed I | Date: | |

ORIGINAL

CM01 August 27, 1998

ECS/EDF/REL2 CCB

• 98-1220 P.Z

Appendix B. Installation Instructions

B.1 Installation Instructions (ECS Specific)

Upgrading ECS sites to FLEXIm v6.1 essentially entails placing copies of the new binaries on each of the license server hosts (see Table 1) and verifying that related scripts and files are properly configured. FLEXIm license servers must be stopped to perform the upgrade.

This section describes how to upgrade an earlier version of FLEXIm to v6.1 and configure it for ECS. It assumes that the earlier version had previously been installed at the file locations listed in Table 2. If this is not the case, adjust the procedure as appropriate or re-install FLEXIm using the file locations in the table. To install FLEXIm on a new host, refer to section B.2.

Take care to note the procedural differences for SUNs and SGIs, and consider upgrading one set of license servers (i.e., all SUNs or all SGIs) before the other.

Table 1. ECS License Server Hosts

| | EDC | GSFC | LaRC | NSIDC | SMC | VATC |
|----------------------|---------|---------|---------|---------|---------|---------|
| SUNs | | | | | | |
| CSS Server | e0css02 | g0css02 | l0css02 | n0css02 | m0css03 | t1css01 |
| MSS File Server | e0mss01 | g0mss10 | I0mss10 | n0mss01 | m0mss01 | t1mss04 |
| Tape Backup Server | e0mss04 | g0mss07 | l0mss05 | n0mss05 | m0mss04 | t1mss02 |
| SGIs | | | | | | |
| APC Server (P) | | | | n0acg01 | | t1acg01 |
| FSMS Server (P1) | e0drg01 | g0drg01 | l0drg01 | n0drg01 | | t1drg01 |
| FSMS Server (P2) | e0drg02 | g0drg02 | | | | |
| FSMS Server (S) | e0drg05 | g0drg07 | l0drg03 | n0drg02 | | |
| Working Storage Host | | | l0wkg01 | | | t1wkg01 |

Table 2. ECS File Locations for FLEXIm

| | File Name | Vendor Default Dir | ECS Install Dir | ECS-standard Dir | |
|---------------|---------------------|--|--|--|--|
| SUNs | | | | | |
| Executables | Imgrd.ste Imutil | /opt/SUNWste/license_tools /opt/SUNWste/license_tools | /opt/SUNWste/license_tools /opt/SUNWste/license_tools | /usr/ecs/OPS/COTS/flexIm | |
| Log files | license_log | • | /tmp | /usr/ecs/OPS/COTS/flexIm | |
| License files | license.dat | /usr/local/flexlm/licenses | /etc/opt/licenses | /usr/ecs/OPS/COTS/flexim | |
| SGIs | | | | | |
| Executables | Imgrd Imutil | /usr/etc /usr/sbin | | /usr/ecs/OPS/COTS/flexIm /usr/ecs/OPS/COTS/flexIm | |
| Log files | license_log | | /tmp | /usr/ecs/OPS/COTS/flexlm/ logs | |
| License files | license.dat | /usr/local/flexlm/licenses | /var/flexim | /usr/ecs/OPS/COTS/flexIm | |

914-TDA-XXX Page 7

98-1220 P.3

Step-by-Step Procedure - Upgrade an Existing License Server

(Steps marked with an asterisk (*) can be bypassed if they were performed when a prior version of FLEXIm was installed.)

Preparation

PREP-1. Obtain the following FLEXIm v6.1 tar files from the SMC:

- flexIm_v61_sun.19981123.100000
- flexlm_v61_sgi.19981123.100000
- * PREP-2. Create administrative NIS user and group accounts:

```
flexlm:*LK*:<uid>:<gid>:FLEXlm Account: /tmp:/bin/csh
lmadmin ::<uid>:
```

Upgrade SUNs

(Steps marked with an asterisk (*) can be bypassed if they were performed when a prior version of FLEXIm was installed.)

SUN-1. Log on as <u>root</u> to any SUN license server host and stop all running SUN license servers:

```
lmdown
(this will take one minute to complete)
lmstat -s
(verify that SUN license daemons are down)
```

<Note> If root is denied permission to run Imdown and Unix group Imadmin exists, run the command as any member of group Imadmin. If group Imadmin does not exist, use "kill pid" to terminate all license server processes. Do NOT use "kill -9".

On each SUN license server host in turn, perform steps 2-11:

SUN-2. Move and link the current lmgrd startup script - S<nn>lmgrd:

```
mv /etc/rc2.d/S85mgrd /etc/rc2.d/S861mgrd
ln /etc/rc2.d/S861mgrd /etc/init.d/lmgrd
cp /etc/init.d/S861mgrd /etc/init.d/s861mgrd
```

* SUN-3. Edit the lmgrd startup script - /etc/init.d/lmgrd - substituting:

```
licfile=/usr/local/flexlm/licenses/license.dat
log=/tmp/license_log

su flexlm -c "$licdir/$lmgrd -c $licfile -1 $log -2 -p &"

# -c $licfile (use the specified license file)
# -1 $log (log all flexlm output to log file)
# -p (restrict lmdown/lmremove to lmadmin group)
```

98-1220 P.4

* SUN-4. Copy the vendor daemon for each installed, FLEXIm-enabled COTS product for the SUN (i.e., ICSBX, idl_lmgrd, rational, and suntechd) from its default directory to the /etc/opt/licenses directory:

```
cp <daemon_file> /etc/opt/licenses
```

* SUN-5. Create a soft link to the license file:

```
ln -s /usr/local/flexlm/licenses/license.dat \
/etc/opt/licenses/license.dat
```

SUN-6. Replace FLEXIm binaries with files from the SUN tar file:

```
cd /opt/SUNWste/license_tools
mv lmgrd.ste lmgrd.ste_v<old_ver_num>
mv lmutil lmutil_v<old_ver_num>
tar xvf <sun_tar_filename> lmgrd.ste lmutil
```

SUN-7. Restrict "lmgrd" execution to flexlm account:

```
chown flexlm /opt/SUNWste/license_tools/lmgrd.ste
chmod 700 / opt/SUNWste/license_tools/lmgrd.ste
```

* SUN-8. Remove "lm" utility files and relink to "lmutil":

```
cd /opt/SUNWste/license_tools
rm lmdiag lmhostid lmremove lmreread lmstat lmver
ln lmdiag lmutil
ln lmdown lmutil
ln lmhostid lmutil
ln lmremove lmutil
ln lmreread lmutil
ln lmstat lmutil
ln lmstat lmutil
```

SUN-9. Establish links for standard ECS pathnames:

SUN-10. Update local sysadmin log file(s), as appropriate.

Perform step 11 on the last SUN license server host after it has been upgraded:

SUN-11. Restart all SUN license servers:

```
su flexlm -c "/usr/ecs/OPS/COTS/flexlm/lmgrd \
    -c /usr/local/flexlm/licenses/license.dat \
    -1 /tmp/license_log \
    -p &" (this will take one minute to complete)
lmstat -s (verify required license daemons are running)
lmdiag (verify licenses can be served)
```

Upgrade SGIs

(Steps marked with an asterisk (*) can be bypassed if they were performed when a prior version of FLEXIm was installed.)

SGI-1. Log on as <u>root</u> to any SGI license server host and stop all running SGI license servers:

P.5 98-1220

```
lmdown
lmstat -s
(this will take one minute to complete)
(verify that SUN license daemons are down)
```

<Note> If root is denied permission to run lmdown and Unix group lmadmin exists, run the command as any member of group lmadmin. If group lmadmin does not exist, use "kill pid" to terminate all license server processes. Do NOT use "kill -9".

Perform steps 2 thru 8 on each SGI license server host in turn:

* SGI-2. Edit startup script - /etc/init.d/flexlm - substituting:

```
SU="/bin/su flex1m -c"
/sbin/killall -TERM lmgrd (replace "lmdown")
```

* SGI-3. Edit the options file - /etc/config/lmgrd.options - substituting:

```
-c /var/flexlm/license.dat -1 /tmp/license_log -p
```

* SGI-4. Create a soft link to the license file:

```
ln -s /var/flexlm/license.dat \
/usr/local/flexlm/licenses/license.dat
```

SGI-5. Replace FLEXIm binaries with files from the SGI tar file:

```
cd /usr/etc
mv lmgrd lmgrd_v<old_ver_num>
tar xvf <sgi_tar_filename> lmgrd
cd /usr/sbin
mv lmutil lmutil_v<old_ver_num>
tar xvf <sgi_tar_filename> lmutil
```

SGI-6. Restrict "lmgrd" execution to flexlm account:

```
chown flex1m /usr/etc/lmgrd
chmod 700 /usr/etc/lmgrd
```

SGI-7. Establish links for standard ECS pathnames:

```
ln -s /usr/ecs/OPS/COTS/flexlm/lmgrd /usr/etc/lmgrd
ln -s /usr/ecs/OPS/COTS/flexlm/lmutil /usr/sbin/lmutil
```

SGI-8. Update local sysadmin log file(s), as appropriate.

Perform step 9 on the last SGI license server host after it has been upgraded:

SGI-9. Restart all SGI license servers:

```
su flexlm -c "/usr/ecs/OPS/COTS/flexlm/lmgrd \
   -c /usr/local/flexlm/licenses/license.dat \
   -l /tmp/license_log \
   -p &" (this will take one minute to complete)
lmstat -s (verify required license daemons are running)
lmdiag (verify licenses can be served)
```

B.2 Vendor Information/Install Instructions

Vendors of FLEXIm-enabled software distribute the binaries and installation instructions needed to set up FLEXIm licensing on a network. The FLEXIm End Users Manual discusses installation

98-1220 P.6

of FLEXIm too, but it generally refers the user to the manuals that accompany licensed products to find specific procedures.

Vendor procedures typically offer the administrator a choice of installing a new license server or using one that already exists, but none specifically address upgrading FLEXIm to v6.1 and configuring it for ECS. If:

- 1. upgrading a license server on a host, follow the instructions in section B.1
- 2. initially installing a license server on a host, run "pkgadd" on the SPARCWorks CD (for Suns) or "inst/swmgr" on the 7.x Compiler CD (for SGIs) according to instructions provided by the vendors, then upgrade to v6.1 by following the instructions in section B.1.